


# Ridgeline Bench Assembly

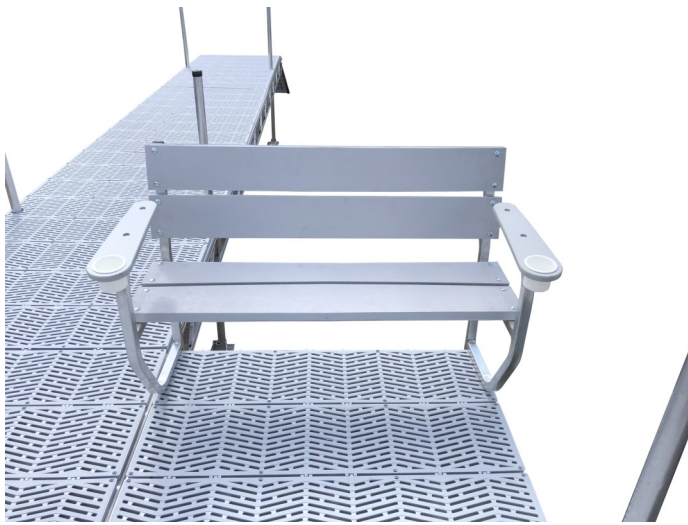

## Hardware Included:

### Bench Boards:

- (16) 5/16" Carriage Bolts
- (16) 5/16" Lock Washers
- (16) 5/16" Nuts

### Arm Rest:

- (4) 1/4" Carriage Bolts
- (4) 1/4" Flat Washers
- (4) 1/4" Nuts

### Bench Frame to Dock Frame:

- (4) 3/8" Hex Head Bolts
- (4) 3/8" Lock Washers
- (8) 3/8" Flat Washers
- (4) 3/8" Nuts

- (1) Bench Support Brace

**Step 7: Assemble arm rest by inserting the 1/4" carriage bolts. You will use the 1/4" flat washers followed by the 1/4" nut.**

## See Next Page For Images and Labels:

- **Step 1: Loosely bolt the bench frames to the desired dock frame location using the 3/8" Hardware.**
- **Step 2: Line each bench board up with drilled holes and run the 5/16" Carriage bolts through the aluminum frames**
- **Step 3: Hand tighten all bench boards by using the lock washers and nuts. Please note to leave the (4) inside carriage bolts where the support brace gets bolted (Next Page Reference)**
- **Step 4: Assemble Bench Support (See Next Page)**
- **Step 5: Once the support brace is assembled, tighten down all hardware until the carriage bolt head is flush to the bench board**
- **Step 6: Tighten 3/8" hardware to the dock frame. Verify that everything is tightened. Do not over turn hardware and dent the tubing frame**


# RIDGELINE

MANUFACTURING, LLC

*Pillager, MN*

NEXT PAGE



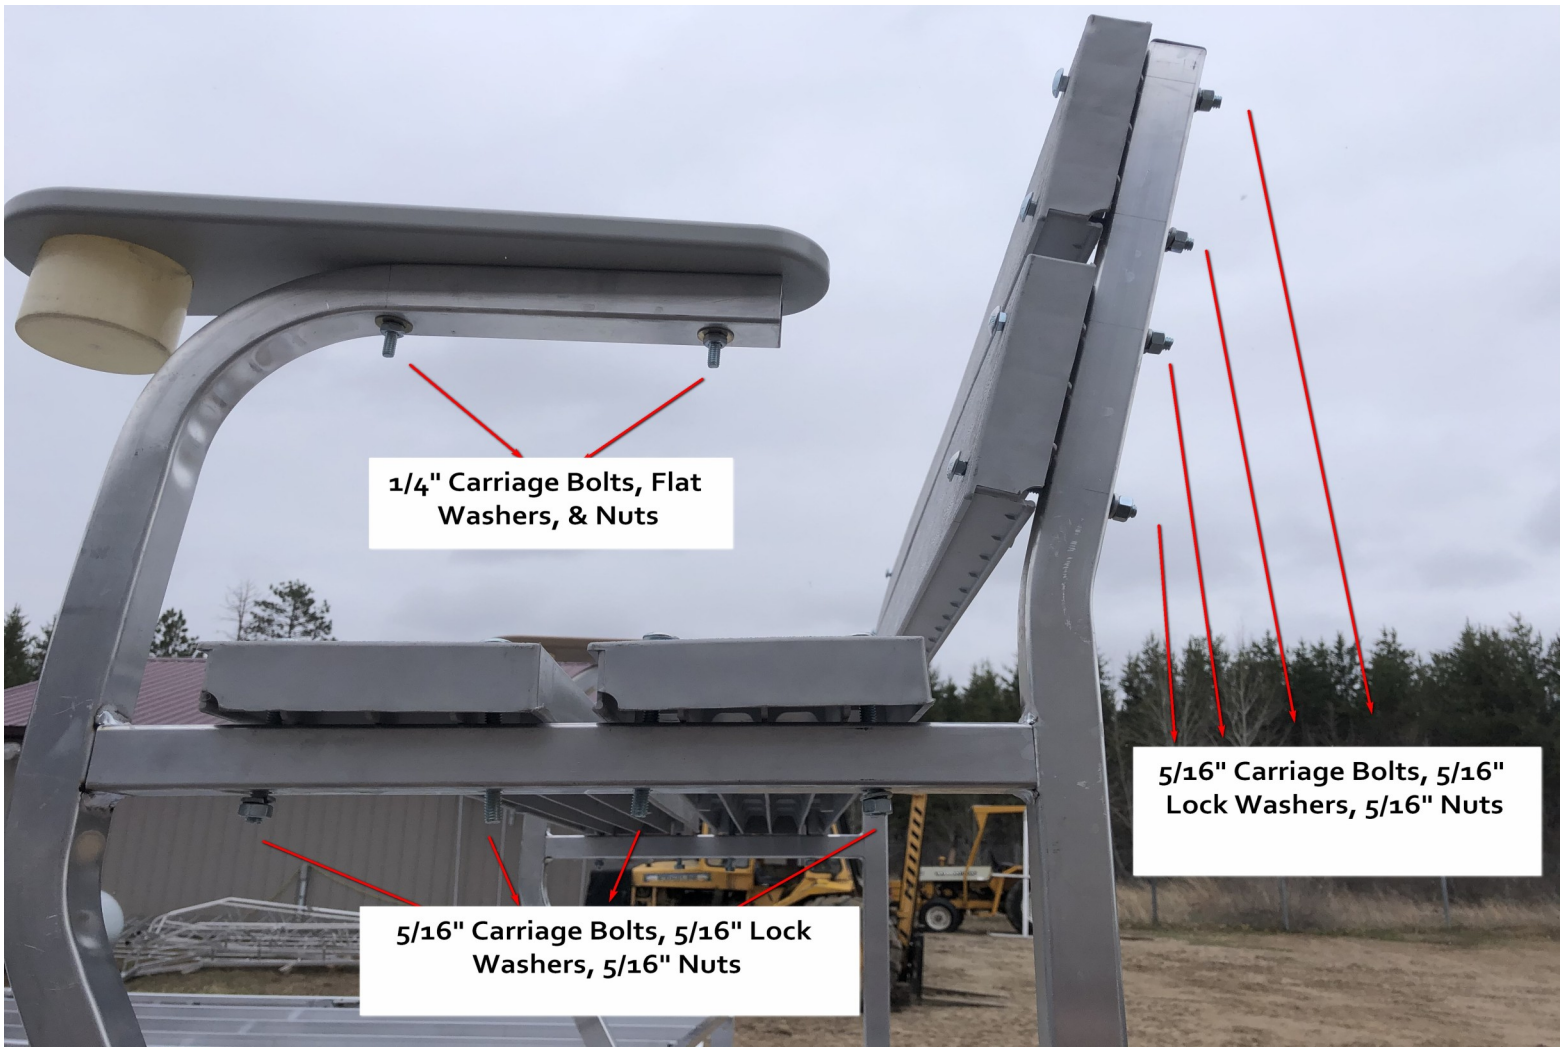

**1/4" Carriage Bolts, Flat Washers, & Nuts**

**5/16" Carriage Bolts, 5/16" Lock Washers, 5/16" Nuts**

**5/16" Carriage Bolts, 5/16" Lock Washers, 5/16" Nuts**



**Support Brace**