


Below: Top View

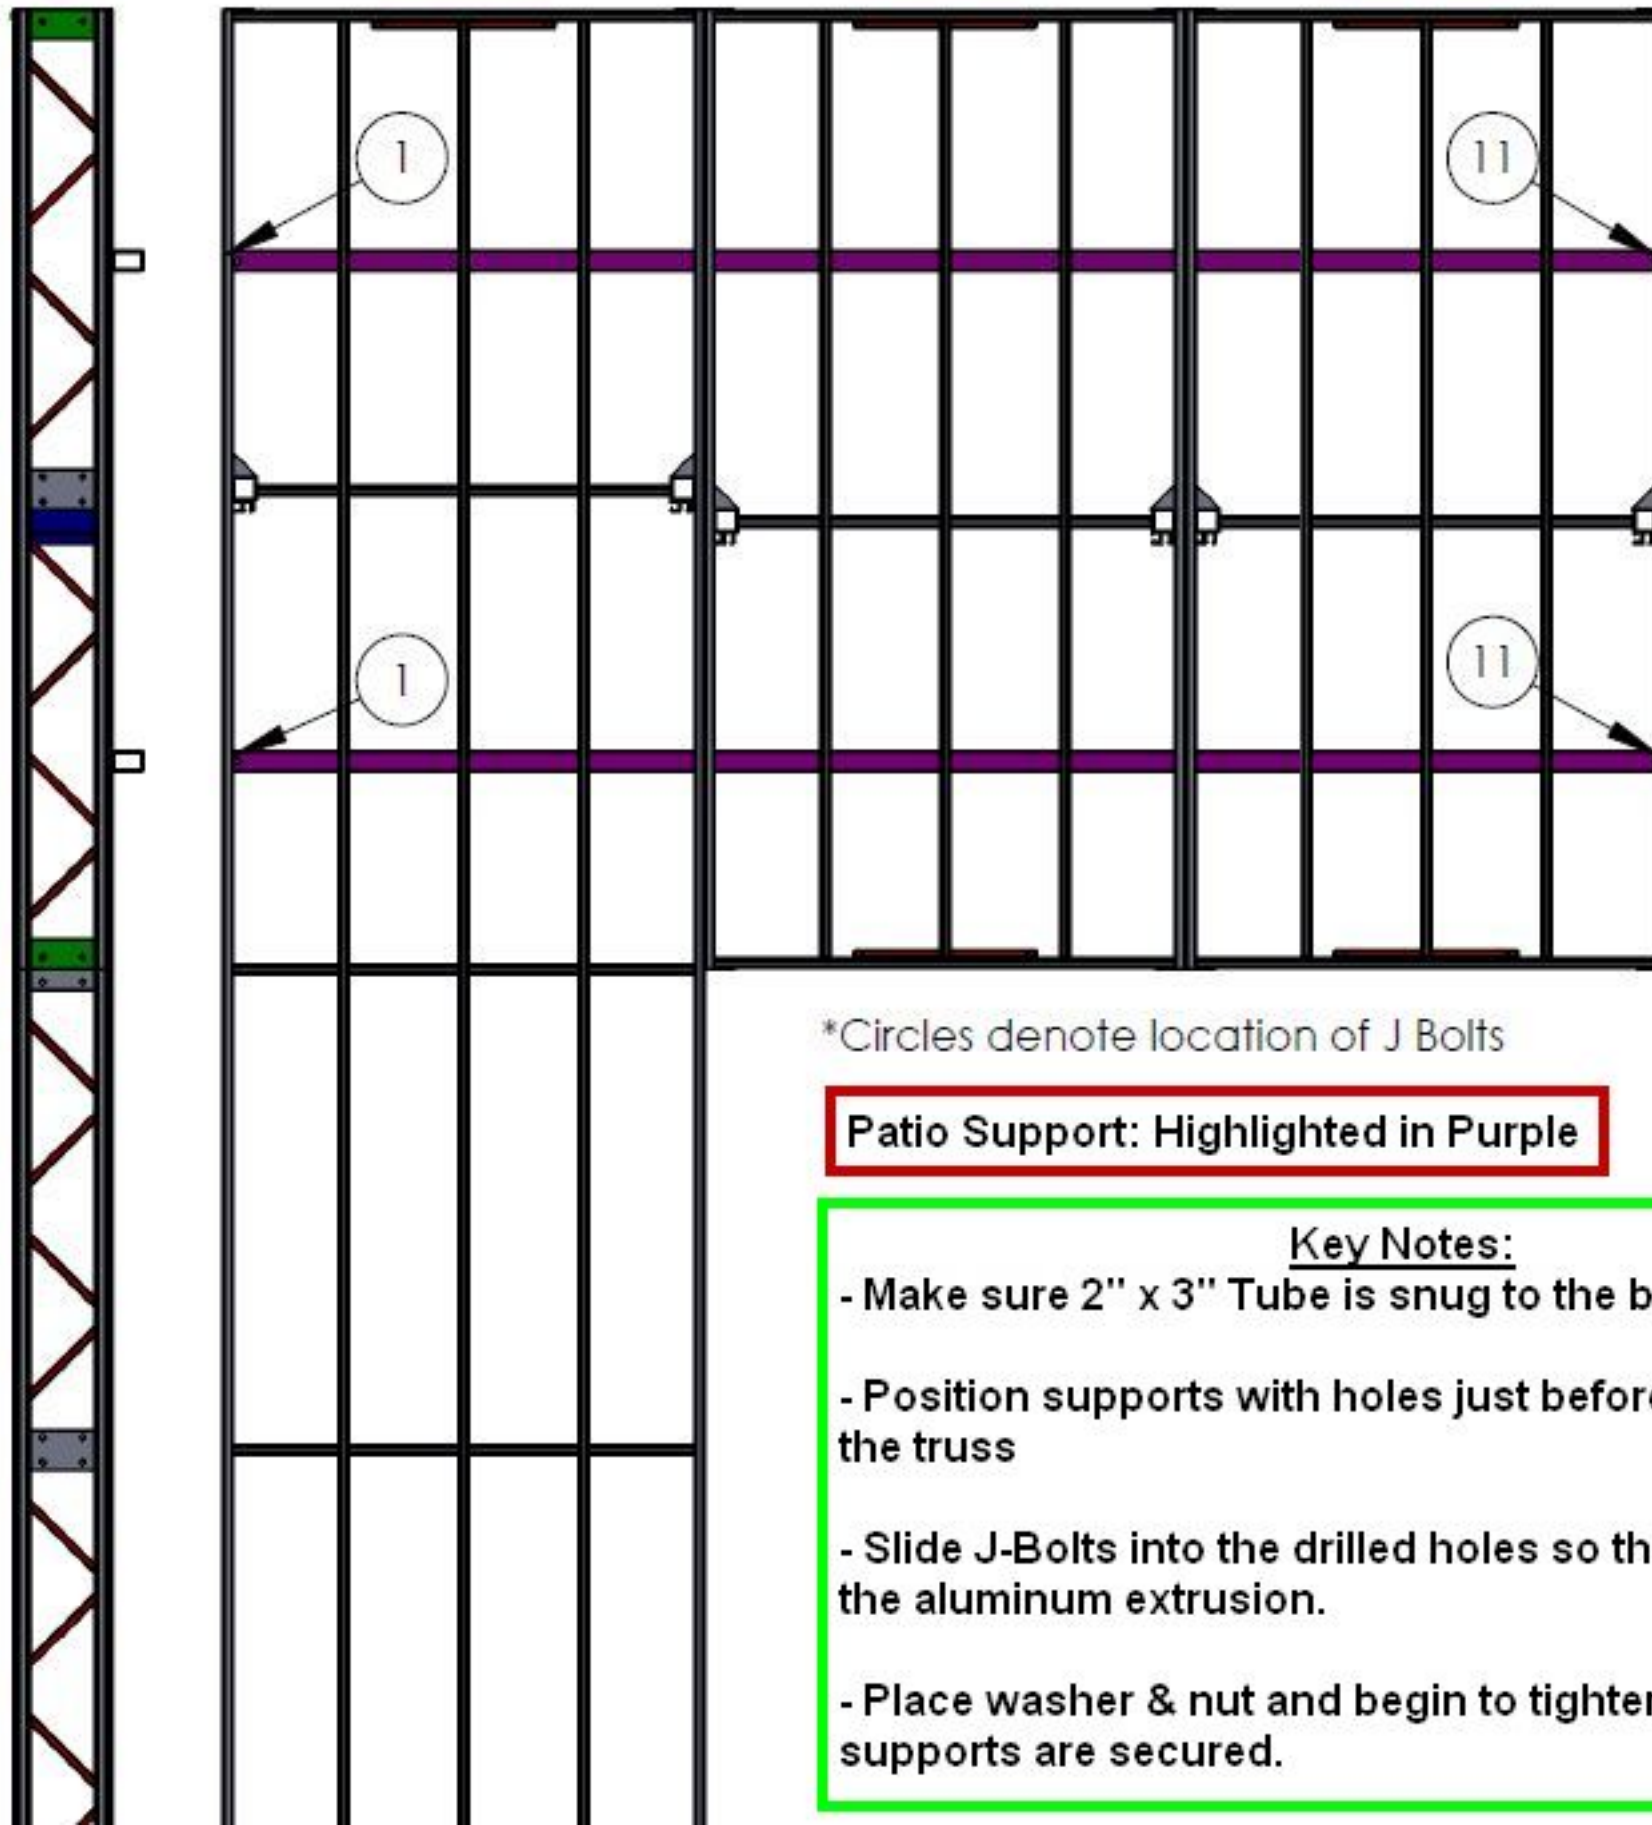

*Circles denote location of J Bolts

Patio Support: Highlighted in Purple

Key Notes:

- Make sure 2" x 3" Tube is snug to the bottom
- Position supports with holes just before the outside of the truss
- Slide J-Bolts into the drilled holes so that the J rests on the aluminum extrusion.
- Place washer & nut and begin to tighten until the supports are secured.